




JIB FURLER Dimensional Chart

Dimensional Chart for Systems: SnapFurl, 750, 1100, 2100, 3100 & 4100

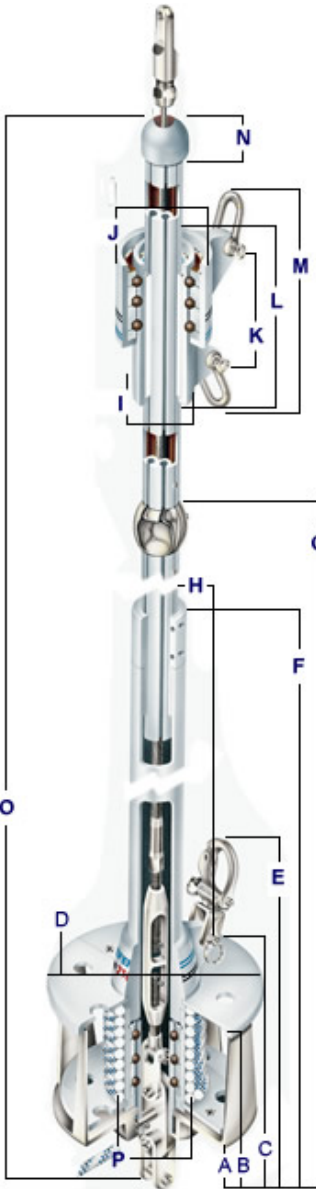

System	CF500	Snapfurl CF-700	750	1100	2100	3100	4100
A	1 1/8" (29mm)	1 1/2" (38mm)	3 7/16" (87mm)	3 1/4" (83mm)	3 3/4" (95mm)	4 3/4" (95mm)	6" (152mm)
B	4" (102mm)	5" (127mm)	8 1/8" (206mm)	7 1/2" (190mm)	5 5/8" (219mm)	10 1/8" (257mm)	14" (356mm)
C	4 1/4" (106mm)	5 1/2" (140mm)	8 7/8" (225mm)	8 11/16" (221mm)	10" (254mm)	11 13/16" (300mm)	16 1/2" (419mm)
D	4 7/8" (124mm)	6 1/2" (165mm)	5 11/16" (144mm)	6 3/4" (171mm)	8 1/4" (210mm)	11 1/8" (283mm)	14" (365mm)
E	5 3/8" (136mm)	6 1/2" (165mm)	10" (254mm)	11 1/8" (283mm)	13" (330mm)	15 7/8" (1.05m)	18 1/2" (470mm)
F	15 3/4" (400mm)	20 3/4" (527mm)	23 13/16" (605mm)	27 1/8" (689mm)	29 5/8" (752mm)	41 1/4" (1.05m)	43 1/2" (1.10m)
G	15 3/4" (400mm)	20 3/4" (527mm)	34 1/4" (870mm)	47 1/2" (1.20m)	50" (1.27m)	60 1/2" (1.54m)	62 1/4" (1.58m)
H	3/8" (10mm)	1" (25mm)	1 5/16" (33mm)	1 3/16" (10mm)	1 1/2" (38mm)	1 1/2" (38mm)	2 1/2" (64mm)
I	1 1/2" (37mm)	1 5/8" (41mm)	1 5/8" (41mm)	2" (51mm)	2 1/2" (64mm)	2 1/2" (64mm)	2 3/4" (70mm)
J	2 5/16" (58mm)	2 7/8" (73mm)	2 7/8" (57mm)	3 1/8" (79mm)	3 11/16" (94mm)	4 3/8" (111mm)	5 1/8" (130mm)
K	3" (76mm)	4 1/4" (108mm)	2 1/4" (76mm)	3 11/16" (94mm)	4 3/8" (111mm)	4 3/8" (111mm)	5" (127mm)
L	3" (76mm)	4" (102mm)	3 7/8" (98mm)	5 3/16" (132mm)	6 1/4" (159mm)	6 5/8" (168mm)	8" (203mm)
M	5" (127mm)	6 1/8" (156mm)	4 5/16" (110mm)	6" (153mm)	7 1/4" (184mm)	7 3/4" (197mm)	9 1/2" (241mm)
N	1 1/8" (29mm)	1 5/8" (41mm)	1 1/16" (27mm)	1 1/8" (29mm)	1 1/4" (32mm)	2 7/16" (32mm)	2 3/4" (70mm)
O	31' 1" (9.5m)	38' (11.6m)	35' 11 1/4" (9.5m)	43' 1" (13m)	49' 3" (15m)	64' 7 1/2" (19.7m)	64' 9 1/4" (24m)
P	1 15/16" (31mm)	1 1/2" (38mm)	1 3/8" (33mm)	1 5/8" (41mm)	2" (51mm)	2 5/8" (67mm)	3 1/2" (83mm)

* System 750 does not utilize wire bearing liners. Illustration represents design of System 2100

Close Window