## **Braided Endless Splice**


| LIROS-Herkules           | Ref.00154-01550 |
|--------------------------|-----------------|
| LIROS-Top Cruising-Color | Ref.00152-01528 |
| LIROS-Allround           | Ref.00151       |
| LIROS-Regatta            | Ref.00142       |
| LIROS-Color              | Ref.00172       |
| LIROS-Seastar            | Ref.00162       |
| LIROS-Standard           | Ref.01082       |
| LIROS-Classic            | Ref.00173       |
|                          |                 |

LIROS Splicing instruction no. 5



Tools needed for an endless splice.



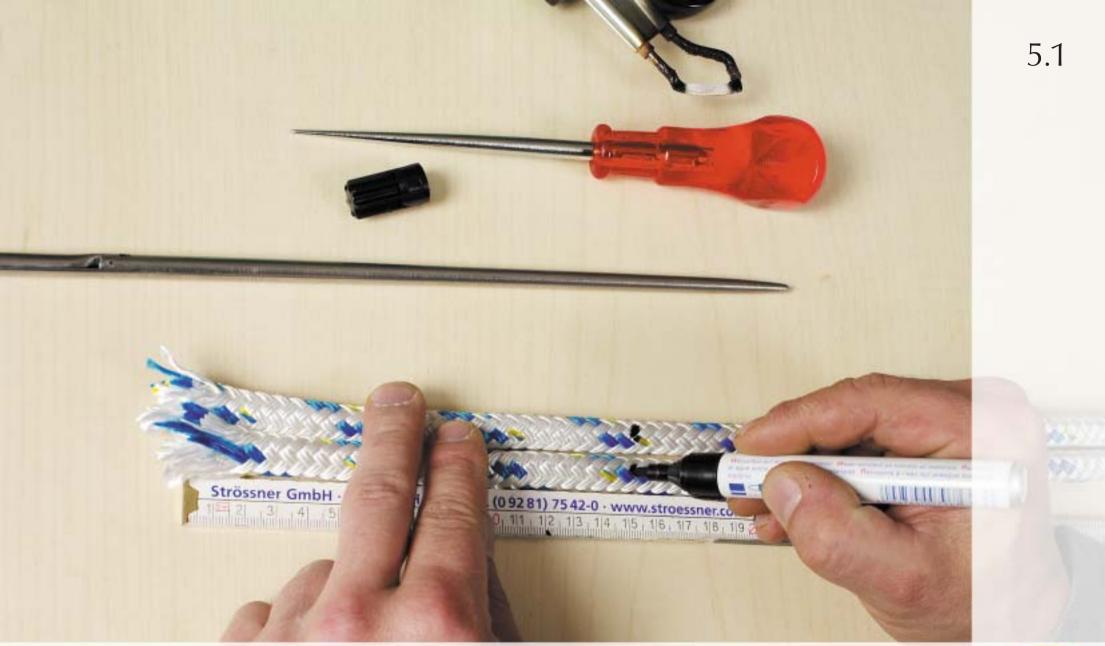

Mark both ends of the rope at a point 15 x 30 cm from each end of the rope to be spliced.





Pull the core out of the cover at the two 30 cm markings.





Photo showing the core pulled out.





Feed the core into the fid and isert at the 15 cm mark and push it through towards the 30 cm mark where the core comes out. If possible make the exit 20 cm beyond the 30 cm.





Now insert the other core at the other 15 cm mark and push it through to the 30 cm mark where the core came out. If possible exit 20 cm past the 30 cm mark.






"Milk" the cover down over the core so that the cover on the inside and the other core finish flush with each other.





After "milking" the cover down completely cut off the rope ends that are protruding so the ends can be "milked" into the core.



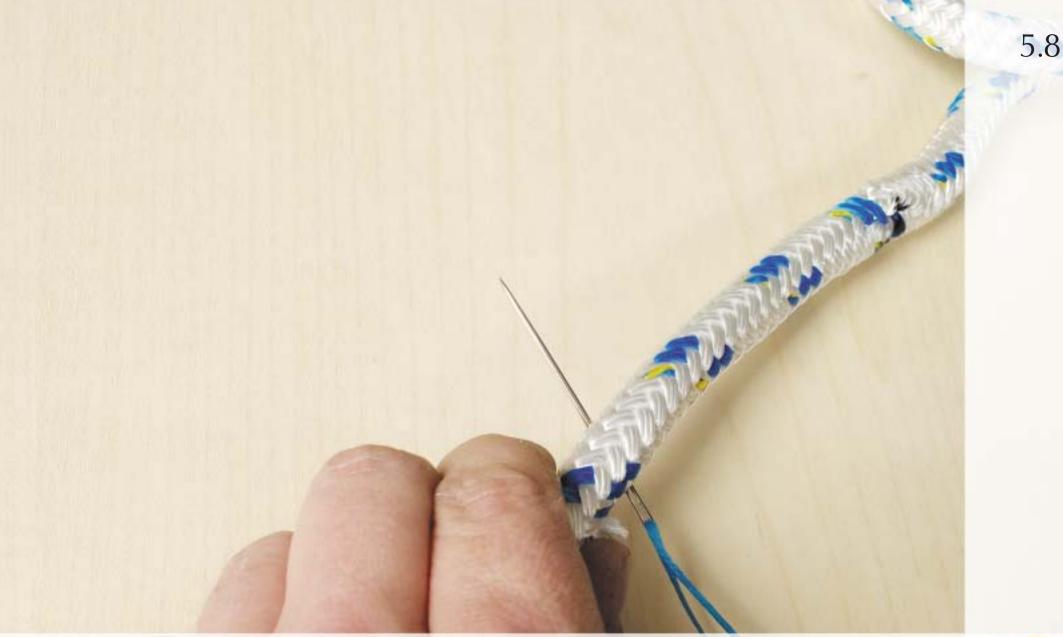

Sew through the splice on sides of the centre several times to prevent any movement of the core.



